


01. Lay out the setup groundsheet, remove the contents from the bag and roll out the inflatable gazebo.



02. Position the structure so that it is in a square shape with the legs tucked underneath the roof.

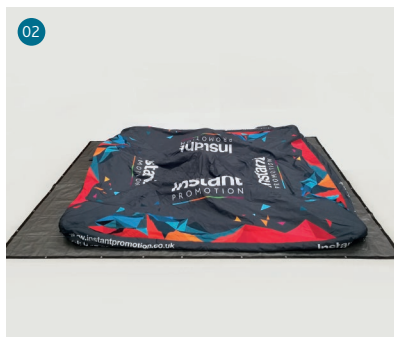


03. Locate a valve in one of the legs and position the electric pump next to the valve. If you have two valves on your unit, ensure the other valve is closed for inflation.



04. Set your pump to the inflate setting and twist the nozzle clockwise to lock in the valve.

05. Inflate until the front two legs are stood upright and pressurised (supervised by two people). Then turn off the pump and close the valve.

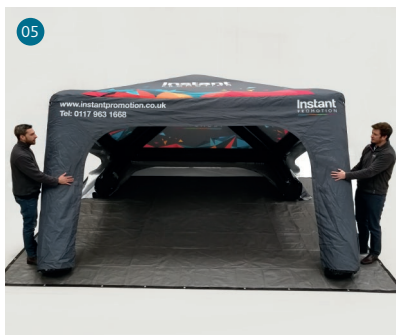

06. Move to the opposite side of the gazebo, and with two people from the outside, lift the remaining two legs up until the gazebo is stood upright.




07. Insert weight plates into the foot pads located at the bottom of each leg.

08. Using the top up function on the pump, fully pressurise the inflatable gazebo to give full structural integrity.



09. Tether the unit from the top corners using ropes or ratchet straps. If you don't have any walls, set up is complete.

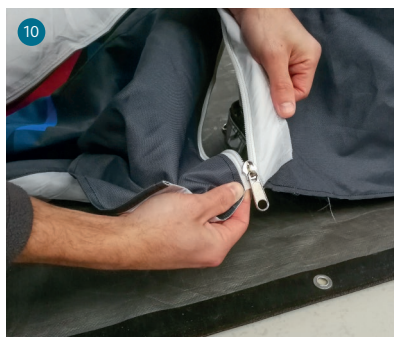





10. If you have walls, locate the zip and attach to the inflatable gazebo.

11. Zip up until the wall is fully attached to the unit and repeat with any other walls.


12. Remove the groundsheet from under the unit and setup is complete.

For more detailed instructions on how to use the pump, please refer to page 3.

01. Reinsert the groundsheet underneath the inflatable gazebo.
02. Remove any walls and fold them away.
03. Open a valve to release air with a minimum of two people supervising - unscrew the outer grey cap and press the central spring button in until locked open.
04. Remove weight plates and fold each leg under the canopy material
05. Set the pump to deflate mode and run until all air has been withdrawn. Make sure the second valve is closed on the opposite leg of your inflatable gazebo if applicable.
06. With a person on each of the back two corners, fold the unit in half by bringing the back over and on top of the front.
07. Fold in half again, as shown in the picture.
08. Roll the gazebo up, as shown in the picture (minimum two people).
09. Stand the unit up on one end and slide the bag over the top half (minimum two people).
10. Manoeuvre the inflatable gazebo so that it is fully in the bag and turn it over so that the open end is at the top (minimum two people).
11. Add any walls & accessories to the bag.
12. Zip up the bag and remove the groundsheet (store separately). If the inflatable gazebo is still damp when packed away please ensure it is dried at room temperature within 48hrs.

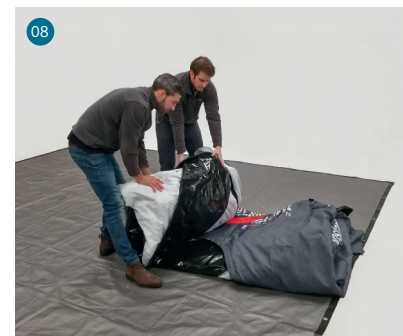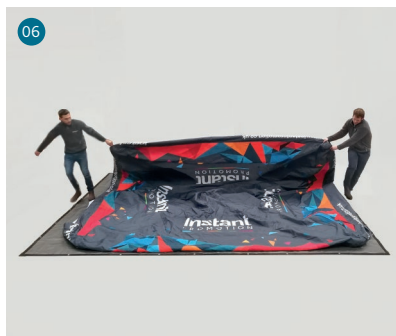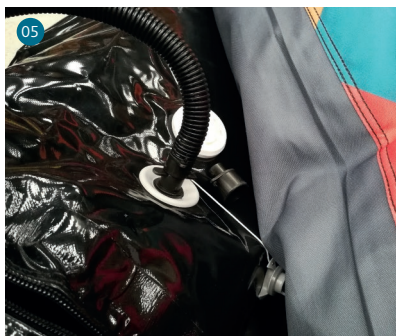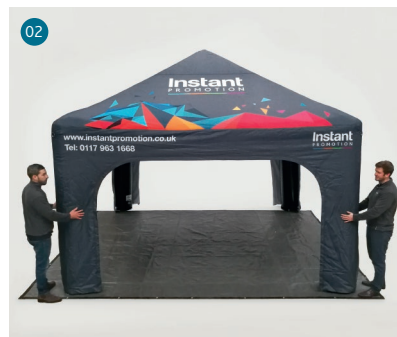

For more detailed instructions on how to use the pump, please refer to page 3.

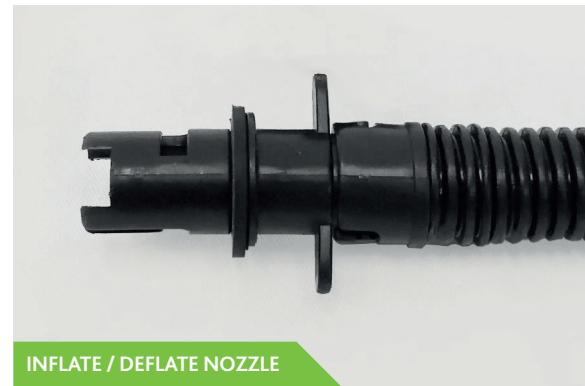

Contents

- 1 x Pump with Mains Plug
- 1 x Accordion Hose
- 1 x Inflate/Deflate Nozzle
- 1 x Top Up Nozzle

Inflation

1. Connect the Inflate/Deflate nozzle to the small end of the hose.
2. Connect the large end of the hose to the inflation port on the pump.
3. Plug the pump into a mains power supply.
4. Attach the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
6. After inflation, turn off the switch and disconnect the power supply.

Top Up

1. Connect the Top Up nozzle to the small end of the hose.
2. Connect the large end of the hose to the inflation port on the pump.
3. Plug the pump into a mains power supply.
4. Hold the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
6. After inflation, turn off the switch and disconnect the power supply.

Deflation

1. Connect the Inflate/Deflate nozzle to the small end of the hose.
2. Connect the large end of the hose to the deflation port on the pump.
3. Plug the pump into a mains power supply.
4. Attach the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin deflation. Never leave the pump unattended while in use.
6. After deflation, turn off the switch and disconnect the power supply.