 
 


01. Lay out the setup groundsheet, remove the contents from the bag and roll out the spider dome in a semi-circular shape as pictured.
02. Locate a valve in one of the legs and position the electric pump next to the valve. If you have two valves on your unit, ensure the other valve is closed for inflation.
03. Set the pump to the inflate setting with the inflate/deflate nozzle attached.
04. Turn on the pump to begin inflation and ensure the nozzle is held in the valve by the user at all times.
05. Once the dome is pressurised to about 80% air pressure, turn off the pump and close the valve.
06. Move to the opposite side of the dome, and with two people on the outside, pull the remaining two legs out until the dome is stood upright.
07. Using the top up function on the pump, fully pressurise the spider dome to give full structural integrity. A second person should hold the dome throughout inflation.
08. Turn off the pump and close the outer cap on the valve.
09. Insert weight plates into the zip pockets located at the base of each leg.
10. Tether the dome from the D-rings on the outside and inside of each leg using ropes or ratchet straps.
11. If you have walls, locate the zip and attach to the dome. Zip up until the wall is fully attached to the unit and repeat with any other walls.
12. Remove the groundsheet from under the unit and setup is complete.

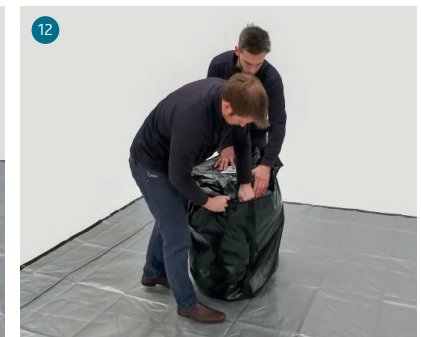 


For more detailed instructions on how to use the pump, please refer to page 3.

01. Unzip and fold away all the walls.
02. Remove the weight plates from the zip pockets in the two back legs.
03. Unscrew the bung.
04. With a person on each of the two back legs, sweep them under the spider dome so that the unit falls into a semi-circular position.
05. Remove the remaining weight plates from the zip pockets in the two front legs.
06. Set the pump to the deflate setting with the inflate/deflate nozzle attached.
07. Turn the pump on to extract as much of the remaining air from the unit as possible, then turn off the pump, leaving the valve open.
08. Position the legs so that the leg with the valve is on its own and the remaining three legs are opposite, as shown in the picture.
09. Start rolling the dome from the base of the three legs towards the top of the dome.
10. Once rolled to the top, manoeuvre the unit so that you can continue to roll down the final leg towards the valve, removing any remaining air as you do so. Close the valve with the bung.
11. Slide the rolled up spider dome into the bag and add any walls & accessories.
12. Zip up the bag and remove the groundsheet (store separately). If the spider dome is still damp when packed away, please ensure it is dried at room temperature within 48hrs.

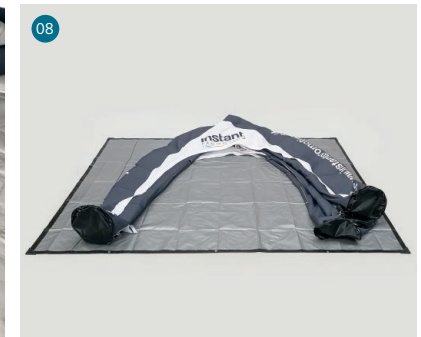

For more detailed instructions on how to use the pump, please refer to page 3.

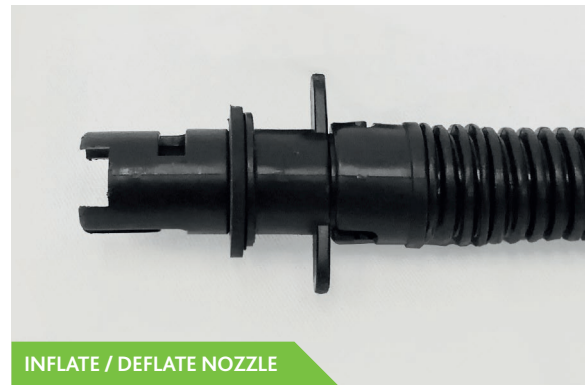

Contents

- 1 x Pump with Mains Plug
- 1 x Accordion Hose
- 1 x Inflate/Deflate Nozzle
- 1 x Top Up Nozzle

Inflation

1. Connect the Inflate/Deflate nozzle to the small end of the hose.
2. Connect the large end of the hose to the inflation port on the pump.
3. Plug the pump into a mains power supply.
4. Attach the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
6. After inflation, turn off the switch and disconnect the power supply.

Top Up

1. Connect the Top Up nozzle to the small end of the hose.
2. Connect the large end of the hose to the inflation port on the pump.
3. Plug the pump into a mains power supply.
4. Hold the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin inflation. Never leave the pump unattended while in use.
6. After inflation, turn off the switch and disconnect the power supply.

Deflation

1. Connect the Inflate/Deflate nozzle to the small end of the hose.
2. Connect the large end of the hose to the deflation port on the pump.
3. Plug the pump into a mains power supply.
4. Attach the nozzle to the valve of the inflatable product.
5. Turn on the pump's power switch to begin deflation. Never leave the pump unattended while in use.
6. After deflation, turn off the switch and disconnect the power supply.