
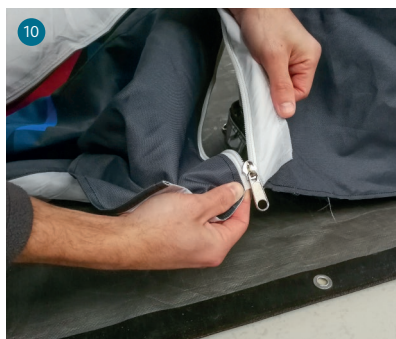
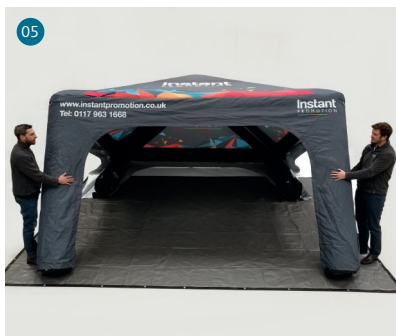


01. Lay out the setup groundsheet, remove the contents from the bag and roll out the inflatable gazebo.
02. Position the structure so that it is in a square shape with the legs tucked underneath the roof.
03. Locate a valve in one of the legs and position the electric pump next to the valve. If you have two valves on your unit, ensure the other valve is closed for inflation.
04. Set your pump to the inflate setting and twist the nozzle clockwise to lock in the valve.
05. Inflate until the front two legs are stood upright and pressurised (supervised by two people). Then turn off the pump and close the valve.
06. Move to the opposite side of the gazebo, and with two people from the outside, lift the remaining two legs up until the gazebo is stood upright.
07. Insert weight plates into the foot pads located at the bottom of each leg.
08. Using the top up function on the pump, fully pressurise the inflatable gazebo to give full structural integrity.
09. Tether the unit from the top corners using ropes or ratchet straps. If you don't have any walls, set up is complete.
10. If you have walls, locate the zip and attach to the inflatable gazebo.
11. Zip up until the wall is fully attached to the unit and repeat with any other walls.
12. Remove the groundsheet from under the unit and setup is complete.

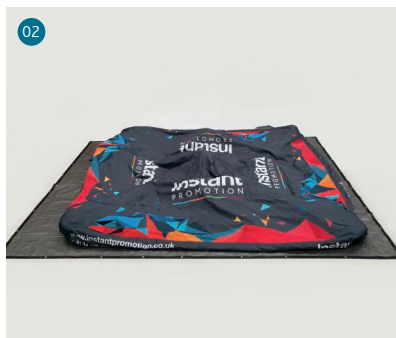

For more detailed instructions on how to use the pump, please refer to page 3.